

## INSTALLATION GUIDE

- 1 --- For against wall application, when positioning the collection tray allow for the combined thickness of the tile substrate plus tile (**fig 1**).
- 2 --- For other than against wall installation snap off and remove the vertical upstand from the collection tray (**fig 2**)
- 3 --- If needed, cut to length the collection tray and tile tray allowing for end stops and joiners.
- 4 --- Position one or more holes for 40 mm spigots , (fits into 50 mm DWV) and drill, take care to remove burrs from holes & cuts.  
 NB. Glue the parts together using a PVC adhesive, and **test for leaks before installing**.
- 5 --- Installation to be in compliance with AS 3500.2.
- 6 --- **The top of the collection tray flange must be level with the top of the tile substrate.**
- 7 --- Provide fall & waterproofing to the tile substrate and over the collection tray flange.

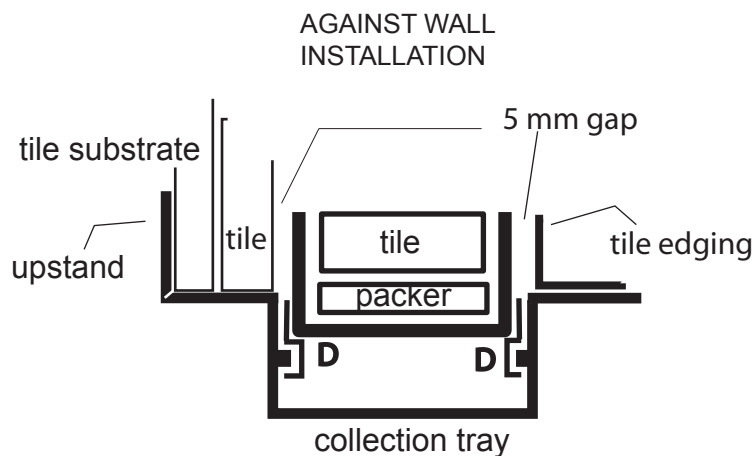


Fig 1

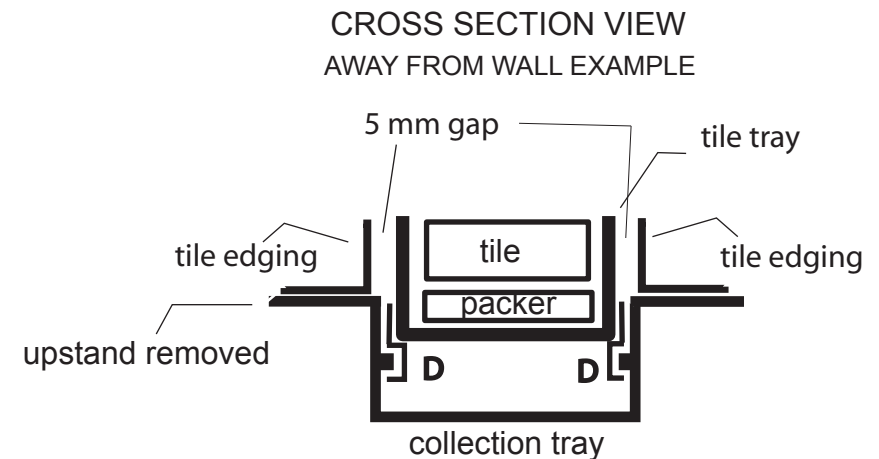


Fig 2

## **TILING**

- 1 --- Cut the tile edging to length allowing for a 5mm gap all around between the tile tray and the tile edging.
- 2 --- Position the lengths of tile edging on the flange so that they do not overhang the collection tray ( see Fig 2)
- 3 --- **Position the tile edging so that there are equal gaps of approx 5 mm between the tile tray and the tile edging.**
- 4--- After tiling select appropriate spacers **D** to align the top of the strip grate tile tray with the top of the tiles.
- 5--- Glue spacers into position to support the grate.
- 6.... Cut tiles to fill the tile tray and use suitable packers to have the top of the tiles in the tile tray level with the top of the floor tiles.
- 7 --- Install strip grate.